



Notes:
 A) Unscrew and remove (6) 10-32 Truss head screws (3 screws from each side).
 B) Loosen (2) 6-32 Truss head screws 1/4 of a turn (1 screw per side). Do not remove these screws.
 C) Rotate the top hot side cover along with bottom hot side shroud to access the hot side heat sink fins for cleaning. The cover can be rotated up to 60° easily.
 D) Clean the heat sink fins with brush and compressed air. For AHP-1200X and AHP-1200XE series the heat sink could be washed with water.
 E) After cleaning rotate the cover and shroud back to the original position and secure in place using the 10-32 Truss head screws.

INFORMATION DISCLOSED HEREIN IS THE CONFIDENTIAL PROPERTY OF TECA CORP. RECIPIENT SHALL NOT USE THE INFORMATION IN ANY UNAUTHORIZED MANNER.		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:		THERMOELECTRIC COOLING AMERICA CORP. AHP-1200 SERIES FIELD CLEANING GUIDE FOR PRODUCTS WITH PIVOT-CLEAN FEATURE				
		DECIMALS .XX +/- .XXX +/-	ANGLE +/- FRACTION +/-					
REV	DESCRIPTION	Date	APPROVED	FINISH:	MATERIAL:	DRAWN BY: AA	DRAWING # SK131230	REV LEVEL
						DATE: 12/19/2013	SCALE	MASTER: MASTER
						D8977		SHEET