


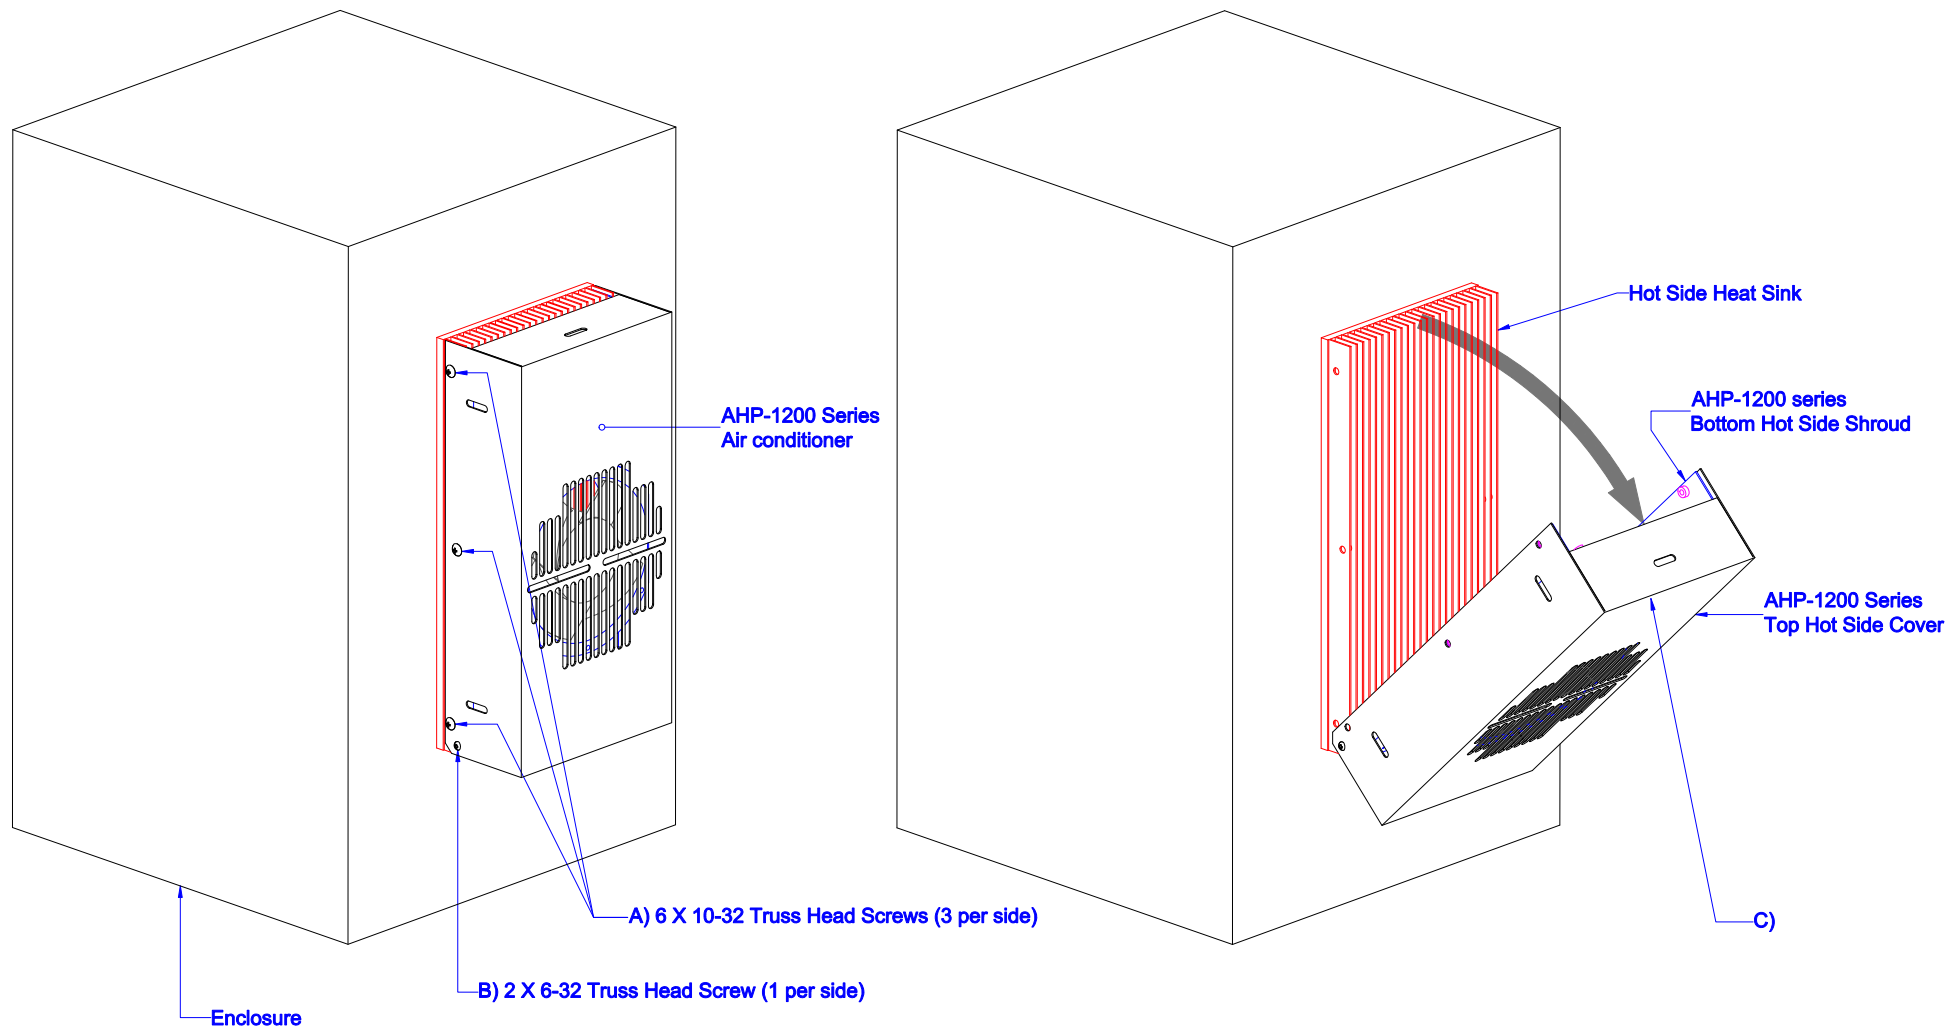

Notes:

- A) Unscrew and remove (6) 10-32 Truss head screws (3 screws from each side).
- B) Loosen (2) 6-32 Truss head screws 1/4 of a turn (1 screw per side). Do not remove these screws.
- C) Rotate the top hot side cover along with bottom hot side shroud to access the hot side heat sink fins for cleaning. The cover can be rotated up to 60° easily.
- D) Clean the heat sink fins with brush and compressed air. For AHP-1200X and AHP-1200XE series the heat sink could be washed with water.
- E) After cleaning rotate the cover and shroud back to the original position and secure in place using the 10-32 Truss head screws.

INFORMATION DISCLOSED
HEREIN IS THE
CONFIDENTIAL PROPERTY
OF TECA CORP. RECIPIENT
SHALL NOT USE THE
INFORMATION IN ANY
UNAUTHORIZED MANNER.

FINISH:

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ARE:

DECIMALS	ANGLE
.XX +/-	+/-
.XXX +/-	FRACTION +/-

MATERIAL:

THERMOELECTRIC COOLING AMERICA CORP.

**AHP-1200 SERIES
FIELD CLEANING GUIDE
FOR PRODUCTS WITH PIVOT-CLEAN FEATURE**

DRAWN BY:
AA

DATE:
12/19/2013

D8977

DRAWING #

SK131230

SCALE

MASTER:
MASTER

REV
LEVEL

SHEET

REV	DESCRIPTION	Date	APPROVED