



If test or sample leads are needed in the cold plate area
remove these plugs and thread the wires through the hole(s)

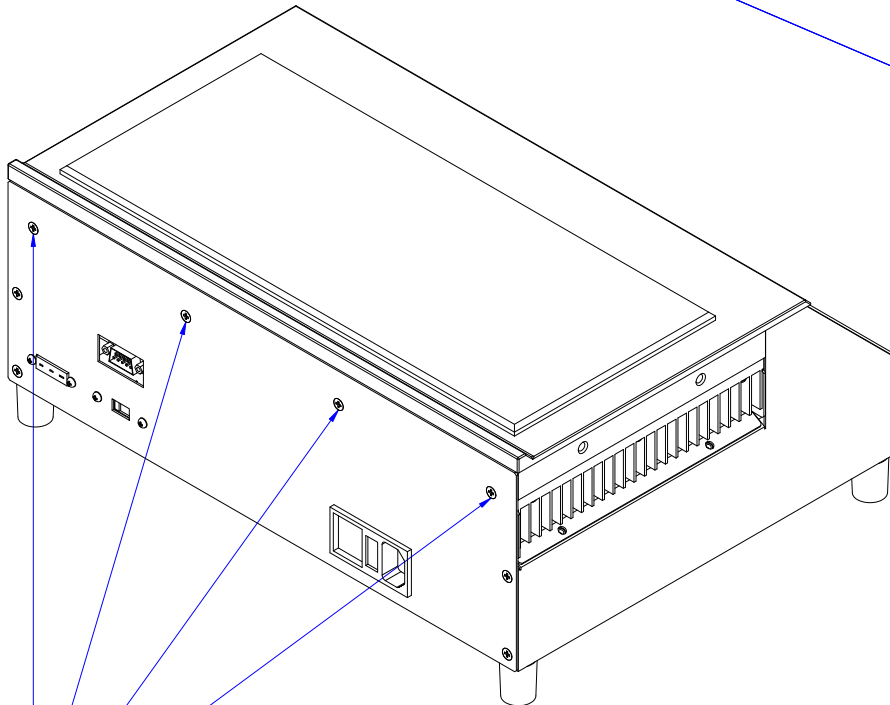

1) Unscrew and remove
these four screws

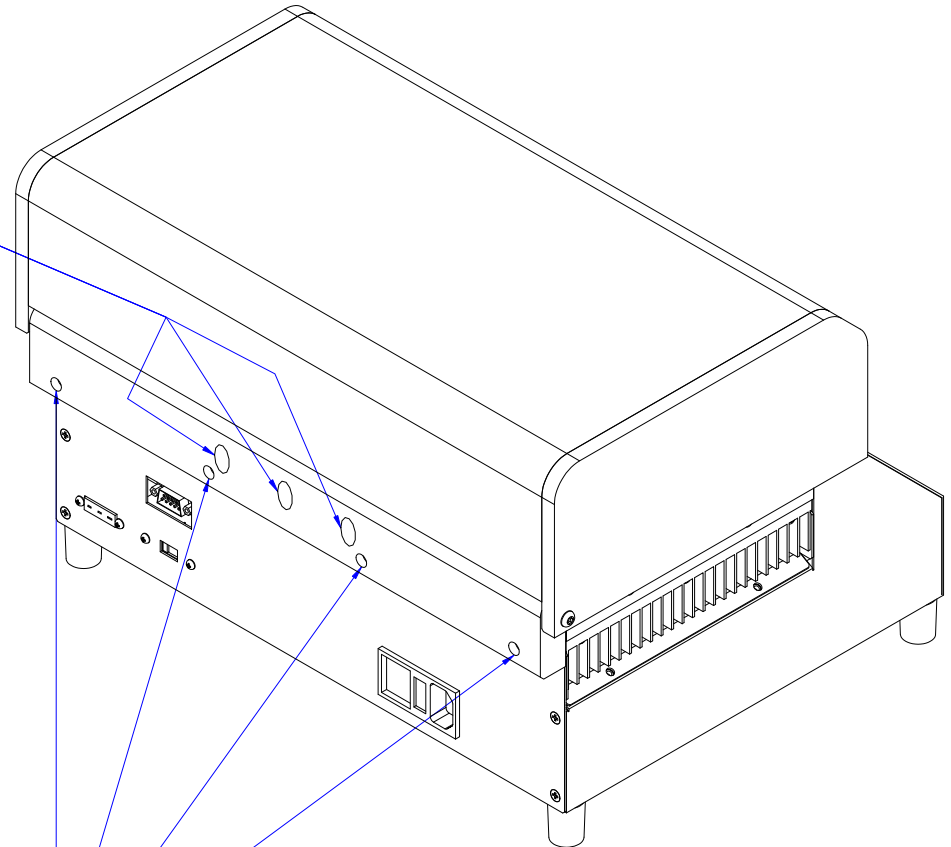

2) Install CH-1200 with included
four screws and star washers

INFORMATION DISCLOSED
HEREIN IS THE
CONFIDENTIAL PROPERTY
OF TECA CORP. RECIPIENT
SHALL NOT USE THE
INFORMATION IN ANY
UNAUTHORIZED MANNER.

FINISH:

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES ARE:

DECIMALS	ANGLE
.XX +/-	+/-
.XXX +/-	FRACTION +/-

MATERIAL:

THERMOELECTRIC COOLING AMERICA CORP.

CH-1200
AHP-1200CPV COVER AND HINGE
INSTALLATION

DRAWN BY:
AA

DATE:
01/08/09

D7436

DRAWING #

SK090107

SCALE

MASTER:

SK090105

REV
LEVEL

SHEET

REV	DESCRIPTION	Date	APPROVED