

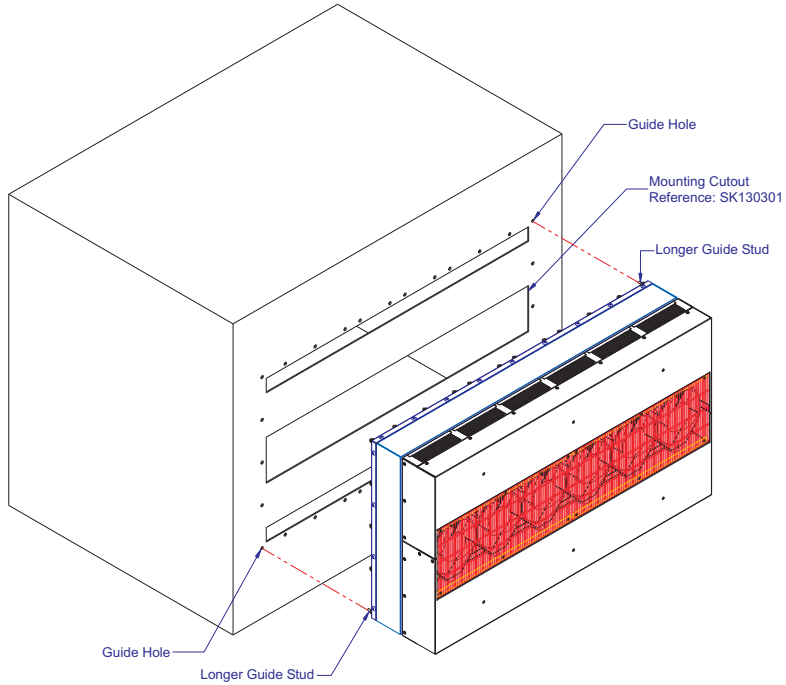


Mounting, Monture, Montage, Montaggio

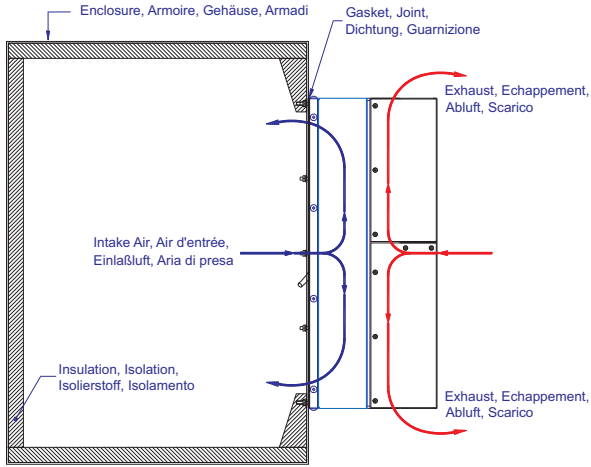

Alternate, Alternative, Alternative, Alternativa

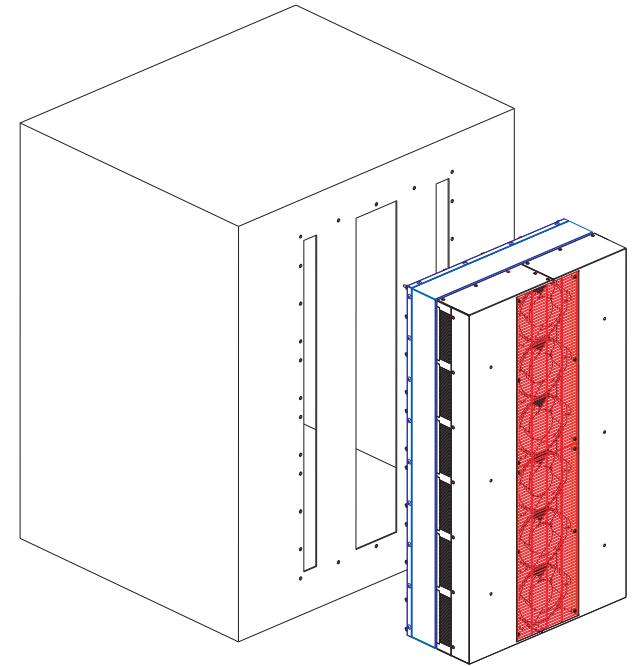

Notes:

- Lay out the mounting cutout and holes on one of the panels of the enclosure. Note the different size (smaller) guide holes. Reference Mounting Cutout drawing SK140428.
- Using an appropriate cutting tool cut the mounting cut out and drill the holes.
- Install (2) longer guide studs (10-32 X 1") on the FHP-6200 mounting flange, in the two opposite corners matching the two Ø0.281 guide holes of the cutout.
- Install the remaining (28) stud (10-32 X 3/4") on the FHP-6200 mounting flange.
- Place the mounting gasket on the FHP-6200 mounting flange, the studs will keep the gasket in place.
- Align the two guide studs with the two guide holes of the mounting cutout.
- Push the FHP-6200 through the cutout making sure the two guide studs go through the guide holes in the cutout.
- Once the guide studs clear the guide holes the rest of the studs will line up and clear the mounting holes.
- Push the FHP-6200 flush too the enclosure surface.
- From inside the enclosure install the 10-32 flat washers, 10-32 lock washers and 10-32 Hex nuts on the studs and tighten in an "X" pattern.

INFORMATION DISCLOSED HEREIN IS THE CONFIDENTIAL PROPERTY OF TECA CORP. RECIPIENT SHALL NOT USE THE INFORMATION IN ANY UNAUTHORIZED MANNER.		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES. TOLERANCES ARE:		THERMOELECTRIC COOLING AMERICA CORP.	
		DECIMALS ANGLE .XX +/- +/- .XXX +/- FRACTION +/-		FHP-6200 SERIES	
				TYPICAL INSTALLATION	
FINISH:		MATERIAL:		DRAWN BY: AA	DRAWING #
				DATE: 04/08/2014	SK140429
				D9120	SCALE
				MASTER: SK140428	REV LEVEL
					SHEET

REV	DESCRIPTION	Date	APPROVED