Product Information Packet

Model AHP-1200FFHC

NEMA-12, Heat/Cool, Solid State Air Conditioner, 24 VDC

With Integral TC-4600

Part #0-30H5-1-000

Thank you for your purchase. Information has been enclosed regarding the installation, specifications, and wiring of your solid-state assembly. Please read and follow all instructions carefully before installation. Only qualified technicians should install this equipment.

If you have any questions regarding your equipment, please do not hesitate to call us at 773-342-4900, and we will be happy to assist you. We are open from 8:00 am-4:30 pm Central Time.

Included in this packet you will find:

Installation Notes for Air Conditioners

Product Literature and Specifications

Assembly Drawing # 1200-B-A13

Wiring Drawing # SK121022

Installation Drawing # 1200-A-F57

Warranty Information




Important Installation Notes for Air Conditioners

Mounting Styles: Both 'thru mount' and 'flush mount' units can be positioned in any orientation and on any enclosure surface. It is important to consider interior air flow patterns when determining the mounting location. Also of importance is an unrestricted flow of ambient air thru the hot side heat exchanger. Ease of access and inspection must be considered for those applications in particularly severe environments which may require occasional maintenance.

Vertical (Side/Front/Back) Mounting:

Vertical mounting refers to the vertical direction of the cold side or interior fins and is recommended for applications with high humidity, poor and incomplete cabinet seals or any condition which may cause the cold side fins to be maintained at temperatures below the dew point for long periods of time allowing for the formation of condensation. The vertical fin direction provides a drip path whereupon condensation can be collected via a moisture removal system (standard on FHP-units) or a drip pan positioned below the cold side fins. Drip pa

units) or a drip pan positioned below the cold side fins. Drip pans are optional for thru mount units.

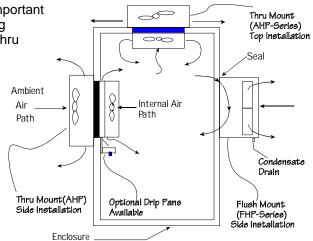

Condensate Removal System:

All FHP-Series and AHP-1400 air conditioners contain a built-in condensate removal system. The condensate kit consists of a antifungal sponge with a condensate wick. PVC tubing is also provided for drainage. Drip pans are optional for thru mount units which must be evaluated on an individual basis. Equations defining a relationship between the cold side fin and enclosure temperatures are provided to assist in the evaluation.

Top Mounting:

Though often the easiest location to mount it is often the most difficult to protect from condensation in this orientation due to the fin orientation, gravity and any susceptible components below. If a drip pan is employed by the end user use caution to place the pan far enough away from the internal fan to minimize the restriction of air flow. The pan should cover the fin ends as well as the fan area. When there is a choice, the vertical orientation is preferred by most users.

Maintenance:

Since the technology is solid-state, there are no filters, compressors, or fluorocarbons to maintain. The only moving parts are the fans. It is recommended for harsh or dirty environments that the heat sinks be cleaned from time to time. This can be accomplished by directing compressed air over the external fins or on NEMA 4 versions by hosing the unit down. This will increase the overall life and performance of the system.

Cautions:

Take care when mounting not to damage the seal between the hot and cold side sinks. Do not attempt to mount a unit to a warped surface or try to make the units mounting surface conform to an unflat surface. Do not pinch or damage any leads when mounting. Do not over tighten any installation screw, use reasonable force. Always mount with any condensate drain down. Do not compress the cold side between the hot side and any other surface. Do not obstruct the airflow on either side. When mounting consider the natural air flows of the enclosure. Connect power only after the installation is complete.

Notes on condensation:

Condensation occurs at the cold side fins when the surface temperature goes below the dew point. To reduce or remove condensate, consider the following:

- Regulate the Fin Temperature above the Dewpoint.
- Keep Enclosure Closed and Sealed from Outside Humidity.
- Use Desiccant (Moisture absorbing Granules.)
- Employ Condensate Removal System/Drip Pans.

If you have any questions regarding your installation, Please feel free to contact our technical department for assistance at 773-342-4900.



AHP-1200

Air Conditioner

Air Cooled Through Mounted NEMA-12, 4,4X 24 VDC Input High Efficiency 530 BTU/HR

FEATURES

- High capacity thermoelectric design
- Lower profile intrusion into enclosure
- Closed loop design
- Condensate control and evaporation system
- Compact
- Increased efficiency at higher ambients by as much as 12%
- · Virtually maintenance free
- No compressor
- Environmentaly friendly and safe
- Stainless Steel exterior housing
- Mounts and operates in any orientation
- Integral temperature controller
- Oprerating ambient temperature range -40/+65 °C
- Oprerating enclosure temperature range -10/+60 °C
- Weight 18 LBS.

POWER INPUTS	
Voltage	24 VDC
Current, Active	9.0 AMPS
Current , ECO-Mode	0.9 AMPS


PERFORMANCE RATINGS

Cooling (Traditional)	530 BTU/HR
Cooling (Din 3168)	154 WATTS
Cooling COP (at L35 L35)	0.71
Heating (Traditional)	> 736 BTU/HR
Heating (Din 3168)	> 216 WATTS
Heating COP	> 1.0

INCLUDES

- Temperature controller
- Mounting gasket
- Mounting hardware
- Power input leads

CONTROL TEMPERATURES							
Temp. Control	Active Heat °C	ECO-Mode °C	Active Cool °C				
TC-1F	-	-	35				
TC-6F	-	-	25 or 35				
TC-3F	10	-	35				
TC-7F	10	25	35				

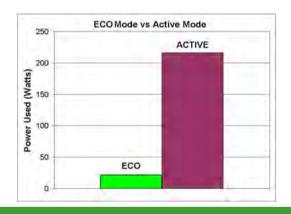

CONFIGURATIONS


MODEL	PART NUMBER		MPERATURE CONTROL	ENVIRONMENT
AHP-1200	0-3095-0-000	Cool only	None	NEMA-12, IP 52
AHP-1200	0-3085-0-000	Cool only	TC-6F	NEMA-12, IP 52
AHP-1200	0-30F5-0-000	Cool only	TC-1F	NEMA-12, IP 52
AHP-1200	0-3055-0-000	Cool only	EXT*	NEMA-12, IP 52
AHP-1200HC	0-3035-1-000	Heat/Cool	TC-3F	NEMA-12, IP 52
AHP-1200HC	0-30I5-1-000	Heat/Cool	TC-7F	NEMA-12, IP 52
AHP-1200HC	0-3055-1-000	Heat/Cool	EXT*	NEMA-12, IP 52
AHP-1200HC	0-30H5-1-000	Heat/Cool	TC-4600	NEMA-12, IP 52
AHP-1200XE	0-3095-4-000	Cool only	None	NEMA-4, IP 56
AHP-1200XE	0-3085-4-000	Cool only	TC-6F	NEMA-4, IP 56
AHP-1200XE	0-30F5-4-000	Cool only	TC-1F	NEMA-4, IP 56
AHP-1200XE	0-3055-4-000	Cool only	EXT*	NEMA-4, IP 56
AHP-1200XEHC	0-3035-1-000	Heat/Cool	TC-3F	NEMA-12, IP 52
AHP-1200XEHC	0-30I5-1-000	Heat/Cool	TC-7F	NEMA-12, IP 52
AHP-1200XEHC	0-3055-1-000	Heat/Cool	EXT*	NEMA-12, IP 52
AHP-1200XEHC	0-30H5-1-000	Heat/Cool	TC-4600	NEMA-12, IP 52

* Unit is set for 5-32 VDC external signal, relay(s) included

MODEL	PART NUMBER		MPERATURE CONTROL	ENVIRONMENT
AHP-1200X	0-3095-0-000	Cool only	None	NEMA-12, IP 52
AHP-1200X	0-3085-0-000	Cool only	TC-6F	NEMA-12, IP 52
AHP-1200X	0-03F5-0-000	Cool only	TC-1F	NEMA-12, IP 52
AHP-1200X	0-0355-0-000	Cool only	EXT*	NEMA-12, IP 52
AHP-1200XHC	0-0335-1-000	Heat/Cool	TC-3F	NEMA-12, IP 52
AHP-1200XHC	0-0315-1-000	Heat/Cool	TC-7F	NEMA-12, IP 52
AHP-1200XHC	0-0355-1-000	Heat/Cool	EXT*	NEMA-12, IP 52
AHP-1200XHC	0-03H5-1-000	Heat/Cool	TC-4600	NEMA-12, IP 52
AHP-1200XM†	0-0395-4-041	Cool only	None	NEMA-4, IP 56
AHP-1200XM†	0-0385-4-034	Cool only	TC-6F	NEMA-4, IP 56
AHP-1200XM†	0-03F5-4-035	Cool only	TC-1F	NEMA-4, IP 56
AHP-1200XM†	0-0355-4-036	Cool only	EXT*	NEMA-4, IP 56
AHP-1200XMH	C† 0-0335-1-037	Heat/Cool	TC-3F	NEMA-12, IP 52
AHP-1200XMH	C† 0-03I5-1-040	Heat/Cool	TC-7F	NEMA-12, IP 52
AHP-1200XMH	C† 0-0355-1-038	Heat/Cool	EXT*	NEMA-12, IP 52
AHP-1200XMH	C† 0-03H5-1-039	Heat/Cool	TC-4600	NEMA-12, IP 52

† Full shock and vibration models

PERFORMANCE CURVE

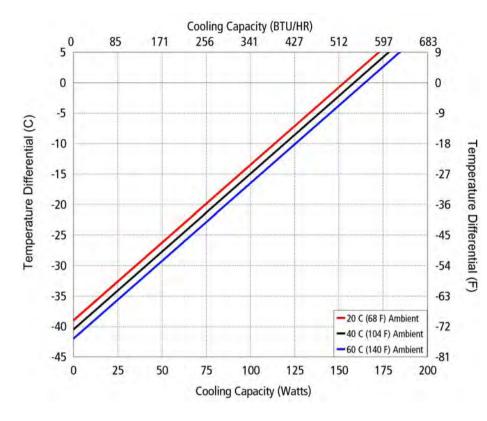

Equation of line: $y=\Delta T(^{\circ}C)$ x=Capacity (Watts)					
Ambient Temp	20°C	40°C	60°C		
Enclosure Air	y=.255x-39.0	y=.255x-41.0	y=.255x-42.0		
Cold Sink	y=.166x-39.0	y=.166x-41.0	y=.166x-42.0		

Mounting hardware and gasket included but not shown.

Dimensions: Inches [Millimeters]

AHP-1200

MOUNTING STYLE

Through Mounted

ENVIRONMENTS SERVED

NEMA-12 IP 52


NEMA-4,4X IP 56

RATING (TRADITIONAL)

530 BTU/hr @ 0 °F Δ T 670 BTU/hr @ +20 °F Δ T

RATING (DIN 3168)


154 Watts L35 L35 100 Watts L35 L50

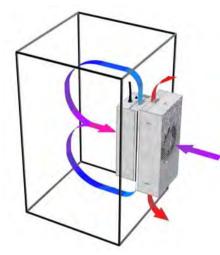



Air Flow Pattern

DIMENSIONS

MOUNTING CUTOUT DIMENSIONS **→**| 5.76 [146.30] **→** Internal Cold Side Fan-(12) 10-32 Studs 2.88 [73.15] External Hot Side Fan 8.17 [207.52] **⊢3.13 [79.40]** 2.88 [73.15] 4.04 [102.62] 7.35 * 3.13 [79.40] 6.62 [168.15] --- 6.62 [168.15] 3.452 [87.68] TYP. 3.452 [87.68] TYP. 13.24 [336.30] 5.00 [381.00] 13.00 [330.20] 3.125 [79.38] 3.125 [79.38] Input Power Cable 12XØ0.218 [Ø6] - 5.50 [139.60] -**Mounting Surface** Temp. Adjustment Circuit Breaker * Dimension does not include hardware and sealant. (TC-6F models only) (VAC models only)

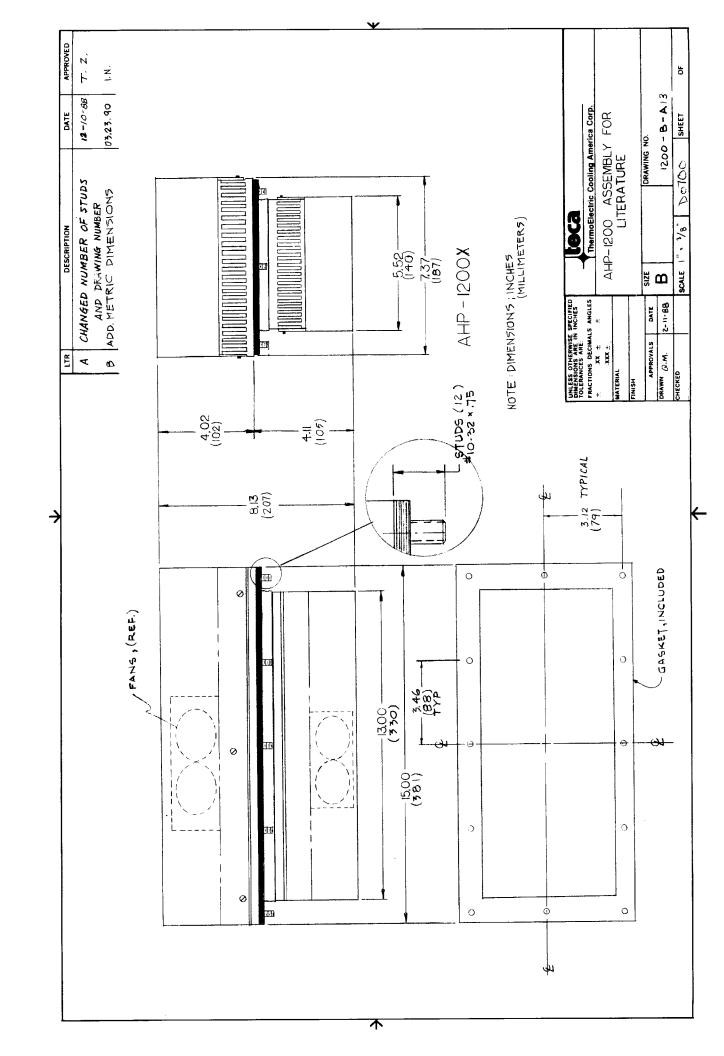

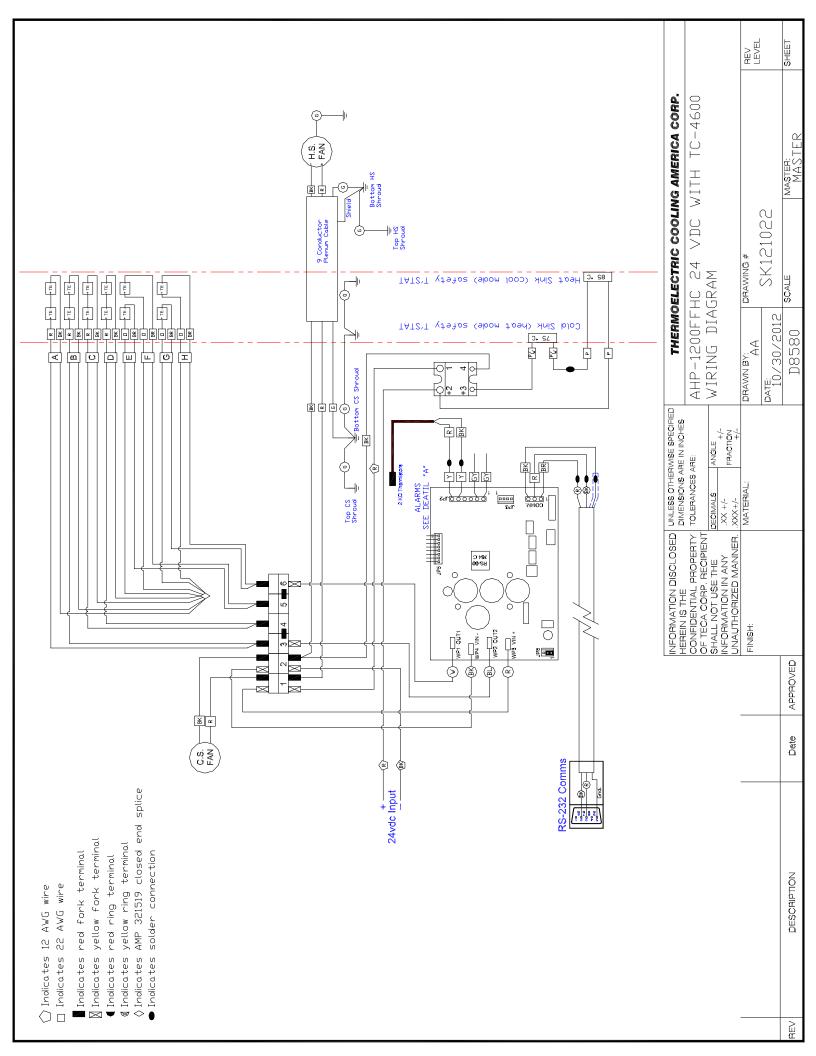

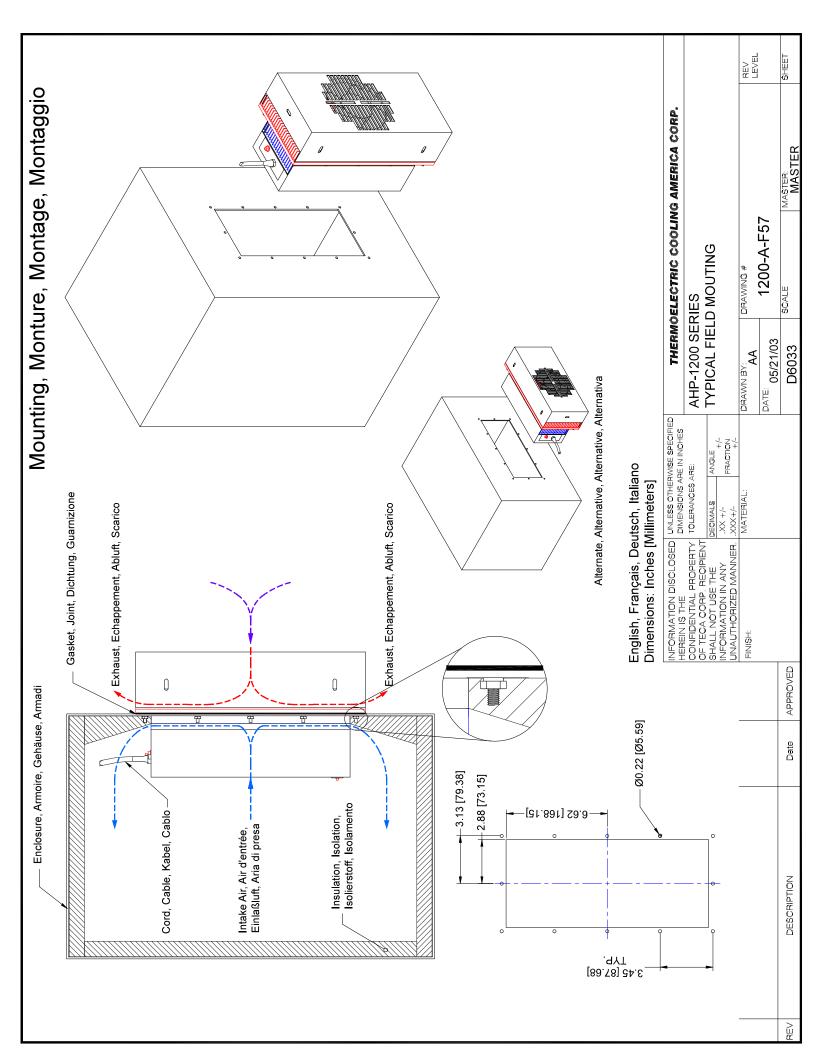

TC-4600

Temperature Controller

PWM Temperature Control RS-232 Comms.

Pulse Width Modulating Temperature Controller

OVERVIEW

The TC-4600 is a bi-directional (heat/cool), H-bridge controller designed to control thermoelectric cooling/heating units with the option to set as unidirectional. The controller accepts an input voltage of 12-36VDC. The output voltage can range from 0 to 36VDC if a split supply is used. The load circuit is pulse width modulated at 2.7KHz and delivers a load of 0.1 to 25 Amps. Temperature resolution for this controller is 0.01°C, providing exceptional control stability in a well designed thermal system.

The H-bridge configuration allows for a seamless transition between heating and cooling. Using a PC with an RS232 interface, the controller can be set for any of the following control configurations: On/Off control, differential temperature control, manual control or any combination of PID control. The user friendly software requires no programming experience to set up the controller. The RS232 interface has 1500 VAC isolation from all the electronic circuitry minimizing the interference from noise or errant signals. Once the controller is set up, the computer may be disconnected and the controller becomes a stand alone unit. If the computer is left connected, it can be used for data acquisition in a half duplex mode. The temperature may also be set through the optional display or through a remote potentiometer. The PC software also provides for several alarm types and the controller has 3 ou puts for alarms with a 5VDC output rated for 25mA of current. In the set up menu the alarm function may be set as no alarm, tracking alarm, fixed value alarm or computer controlled alarm. The menu also offers selections for latching and for maintaining or cutting the power during an alarm. The alarm sensor may by the control temperature sensor or a secondary sensor.



FEATURES

- Full H-Bridge Control
- Fully PC Programmable
- P,I,D or On/Off Control
- PC Configurable Alarm Circuit
- 0-36VDC Output Using Split Power Supply
- RS232 Communications
- RoHS Compliant
- Set Temperature range of -40°C to 250°C dependent on sensor selection

ACCESSORIES

- Model TC-4600D Display: 4 Digit temperature readout for displaying set temperature or actual temperature with capability to adjust the set temperature.
- HS optional Heat Sink: Recommended for applications using 15A of load or greater.
- Thermistor-K: 2000 Ω +/- 2% at 25 °C, best for (-20 °C to 30 °C) range
- Thermistor-Z: 10000 Ω +/- 2% at 25 °C, best for (0 °C to 50 °C) range

SPECIFICATIONS

• Input Voltage: 12VDC to 36VDC

• Output Voltage: 0 to 36VDC with split supply

Load Current: 0.1A to 25A
Bandwidth: 0.1°C to50°C

• Integral: 0 to 10 repeats per minute

Derivative: 0 to 10 minutesPWM Base Frequency: 2.7 KHz

Ambient Temperature range: -20°C to 70°C

• Power Dissipation: <10 Watts

Process Control Rate: 90 times per second


Output Power Resolution: ±0.2%

PART NUMBER AND ORDERING

MODEL NUMBER	PART NUMBER	соммѕ	OPERATING VOLTAGE VDC	SWITCHING VOLTAGE VDC	MAX. SWITCHING CURRENT AMPS.	HEAT SINK	SENSOR	SENSOR RANGE (°C)	DISPLAY	
TC-4600	46-440-41-000	RS-232	12-36	0-36	15*	none	Thermistor-K	-20 to 30	none	
TC-4600	46-440-41-001	RS-232	12-36	0-36	15*	none	Thermistor-K	-20 to 30	included	
TC-4600	46-440-51-000	RS-232	12-36	0-36	15*	none	Thermistor-Z	0 to 50	none	
TC-4600	46-440-51-001	RS-232	12-36	0-36	15*	none	Thermistor-Z	0 to 50	included	
TC-4600	46-44P-41-000	RS-232	12-36	0-36	25	included	Thermistor-K	-20 to 30	none	
TC-4600	46-44P-41-001	RS-232	12-36	0-36	25	included	Thermistor-K	-20 to 30	included	
TC-4600	46-44P-51-000	RS-232	12-36	0-36	25	included	Thermistor-Z	0 to 50	none	
TC-4600	46-44P-51-001	RS-232	12-36	0-36	25	included	Thermistor-Z	0 to 50	included	

^{*} Can switch up to 25 AMPS if used with heat sink


DISPLAY

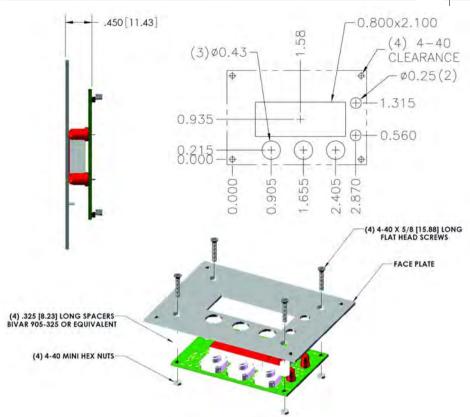

DIMENSIONS

Mounting Without Heat Sink

Mounting With Heat Sink

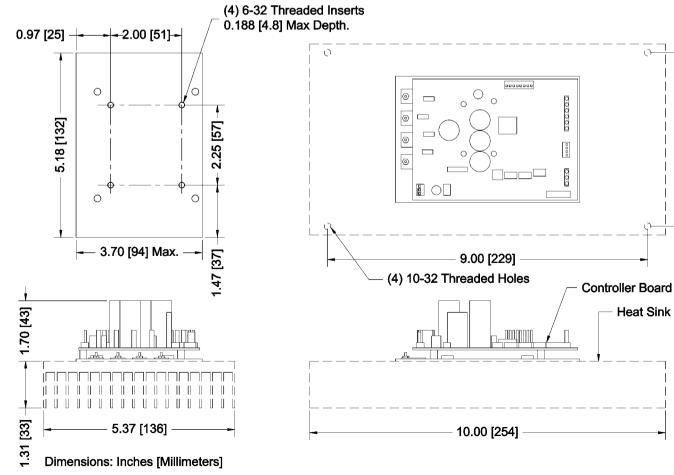

Heat Sink

4.88 [124]

LIMITED WARRANTY

In the event a defect in material or workmanship is discovered in any of TECA's products within one year after the date they are delivered to Buyer, and if: (a) TECA is notified of the defect in writing by certified mail within 14 days of the date of discovery; (b) TECA may then either, at its sole discretion, inspect the product at Buyer's location, or require that the product be made available at Buyer's expense at TECA's premises for TECA's inspection within 14 days of the date of notification; and (c) the products are defective and the defects result from faulty materials and/or workmanship and not in any way from accident, misuse, misapplication, mishandling, modification, or alteration by the Buyer or the shipper, then TECA shall, at its sole option, repair or exchange defective products free of charge to Buyer, or credit to buyer the price of the defective products. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, ARE EXCLUDED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL TECA BE LIABLE FOR ANY CLAIM BASED UPON BREACH OF EXPRESS OR IMPLIED WARRANTY OR ANY OTHER DAMAGES WHETHER SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL, LOST PROFITS, BUSINESS INTERRUPTION, OR LOSS OF BUSINESS OR CUSTOMER RELATIONSHIPS.

RETURNED GOODS, RESTOCKING CHARGES

In order to return merchandise for any reason (repair, replacement, or credit) a return authorization number must be issued by TECA. New merchandise may not be returned for credit beyond 60 days from shipment. Charges for incidental or other damages may also be made. All returned goods must be sent freight prepaid. A restocking charge of 15% will apply. On special equipment and custom modified equipment orders, additional incremental cancellation charges may be made.