# **Product Information Packet**

### Model AHP-4200 Series

Solid State, NEMA-4 Air Conditioner

Heat/Cool, Set For Remote Temperature Controller

Part # 0-J452-5-000

Thank you for your purchase. Information has been enclosed regarding the installation, specifications, and wiring of your solid-state assembly. Please read and follow all instructions carefully before installation. Only qualified technicians should install this equipment.

If you have any questions regarding your equipment, please do not hesitate to call us at 773-342-4900, and we will be happy to assist you. We are open from 8:00 am-4:30 pm Central Time.

Included in this packet you will find:

Installation Notes for Air Conditioners

**Product Literature and Specifications** 

Mounting Cutout Drawing # SK130515

Installation Drawing # SK130516

Wiring Diagram # SK181208

**Temperature Control Information** 

Warranty Information




# Important Installation Notes for Air Conditioners

Mounting Styles: Both 'thru mount' and 'flush mount' units can be positioned in any orientation and on any enclosure surface. It is important to consider interior air flow patterns when determining the mounting location. Also of importance is an unrestricted flow of ambient air thru the hot side heat exchanger. Ease of access and inspection must be considered for those applications in particularly severe environments which may require occasional

maintenance.

### Vertical (Side/Front/Back) Mounting:

Vertical mounting refers to the vertical direction of the cold side or interior fins and is recommended for applications with high humidity, poor and incomplete cabinet seals or any condition which may cause the cold side fins to be maintained at temperatures below the dew point for long periods of time allowing for the formation of condensation. The vertical fin direction provides a drip path whereupon condensation can be collected via a moisture removal system (standard on FHP-units) or a drip pan positioned below the cold side fins. Drip pans are optional for thru mount units.

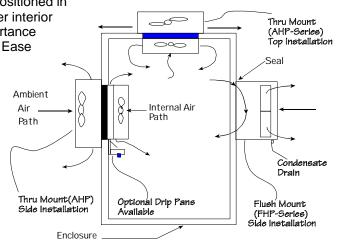

### Condensate Removal System:

All FHP-Series and AHP-1400 air conditioners contain a built-in condensate removal system. The condensate kit consists of a antifungal sponge with a condensate wick. PVC tubing is also provided for drainage. Drip pans are optional for thru mount units which must be evaluated on an individual basis. Equations defining a relationship between the cold side fin and enclosure temperatures are provided to assist in the evaluation.

### Top Mounting:

Though often the easiest location to mount it is often the most difficult to protect from condensation in this orientation due to the fin orientation, gravity and any susceptible components below. If a drip pan is employed by the end user use caution to place the pan far enough away from the internal fan to minimize the restriction of air flow. The pan should cover the fin ends as well as the fan area. When there is a choice, the vertical orientation is preferred by most users.

#### Maintenance:

Since the technology is solid-state, there are no filters, compressors, or fluorocarbons to maintain. The only moving parts are the fans. It is recommended for harsh or dirty environments that the heat sinks be cleaned from time to time. This can be accomplished by directing compressed air over the external fins or on NEMA 4 versions by hosing the unit down. This will increase the overall life and performance of the system.

### Cautions:

Take care when mounting not to damage the seal between the hot and cold side sinks. Do not attempt to mount a unit to a warped surface or try to make the units mounting surface conform to an unflat surface. Do not pinch or damage any leads when mounting. Do not over tighten any installation screw, use reasonable force. Always mount with any condensate drain down. Do not compress the cold side between the hot side and any other surface. Do not obstruct the airflow on either side. When mounting consider the natural air flows of the enclosure. Connect power only after the installation is complete.

### Notes on condensation:

Condensation occurs at the cold side fins when the surface temperature goes below the dew point. To reduce or remove condensate, consider the following:

- Regulate the Fin Temperature above the Dewpoint.
- Keep Enclosure Closed and Sealed from Outside Humidity.
- Use Desiccant (Moisture absorbing Granules.)
- Employ Condensate Removal System/Drip Pans.

If you have any questions regarding your installation, Please feel free to contact our technical department for assistance at 773-342-4900.



## AHP-4252

# Air Conditioner/Heat Exchanger

Air Cooled Through Mounted Nema-12, 4, 4X

35 °C

25°C

10 °C

5°C

-40/+65 °C

-10/+60 °C

240 VAC Input High Efficiency 2780 BTU/HR

#### **FFATURES**

- · High capacity thermoelectric design
- Power saving air to air heat exchanger mode (ECO-Mode)
- · Heavy duty full perimeter mounting
- Lower profile intrusion into enclosure
- Central input cord for easy mounting
- Closed loop design
- Condensate control and evaporation system
- Increased efficiency at higher ambients by as much as 10%
- Virtually maintenance free
- No compressor
- Environmentaly friendly and safe
- Stainless Steel exterior housing
- Mounts and operates in any orientation

CONTROL TEMPERATURES

Integral temperature controller

Heat Exchanger (ECO-Mode)

Weight 110 LBS

Active Cooling

Active Heating

Typical Hysteresis

Operating Ambient

Operating Enclosure

**POWER INPUTS** 

### **INCLUDES**

- Power supply
- Temperature controller
- Power saving heat exchanger mode (ECO-Mode)
- Mounting gasket
- Mounting hardware
- Power input cord
- Circuit breaker

Voltage Current, Active	240 VAC 4.0 AMPS	1200	ECO Mode vs Active Mo	ve Mode	
Current , ECO-Mode Frequency	0.9 AMP 50/60 Hz	1000	ACTI	VE	
PERFORMANCE RATIN	IGS	Watt			
Cooling (Traditional) Cooling (Din 3168)	2780 BTU/HR 815 WATTS	wer Used (Watts)			
Cooling COP (at L35 L35) Heating (Traditional)	0.85 > 3270 BTU/HR	400 200	ECO		
Heating (Din 3168)	> 960 WATTS				

#### Heating COP > 1.0 Heat Exchanger (ECO-Mode) 30 W/°C 250 VDC configuration for crane applications available CONFIGURATIONS MODEL PART NUMBER NOTES **TEMPERATURE ENVIRONMENT** CONTROL AHP-4252 0-J4J2-0-000 Cool only, industrial fans & power supply TC-4F NEMA-12, IP 52 AHP-4252 0-J452-0-000 EXT\* NEMA-12, IP 52 Cool only, industrial fans & power supply NEMA-12, IP 52 AHP-4252HC 0-J4I2-1-000 Heat/Cool, industrial fans & power supply TC-7F AHP-4252HC 0-J452-1-000 Heat/Cool, industrial fans & power supply EXT\* NEMA-12, IP 52 AHP-4252XE 0-J4J2-4-000 Cool only, sealed hot side fans & power supply TC-4F NEMA-4, IP 56 0-J452-4-000 AHP-4252XE Cool only, sealed hot side fans & power supply EXT\* NEMA-4, IP 56 AHP-4252XEHC 0-J4I2-5-000 Heat/Cool, sealed hot side fans & power supply TC-7F NEMA-4, IP 56 AHP-4252XEHC 0-J452-5-000 Heat/Cool, sealed hot side fans & power supply EXT\* NEMA-4, IP 56 AHP-4252X 0-J4J2-2-000 TC-4F NEMA-4X, IP 56 Cool only, Mil. grade hot side fans & power supply AHP-4252X 0-J452-2-000 EXT\* NEMA-4X, IP 56 Cool only, Mil. grade hot side fans & power supply AHP-4252XHC 0-J4I2-3-000 TC-7F NEMA-4X, IP 56 Heat/Cool, Mil. grade hot side fans & power supply AHP-4252XHC 0-J452-3-000 Heat/Cool, Mil. grade hot side fans & power supply EXT\* NEMA-4X, IP 56

<sup>\*</sup> Unit is set for 5-32 VDC external signal, relay(s) included

## **AHP-4252**

### MOUNTING STYLE

Through Mounted

ENVIRONMENTS SERVED

NEMA-12 IP 52

NEMA-12 IP 52 NEMA-4,4X IP 56

RATING (TRADITIONAL)


2780 BTU/hr @ 0 °F  $\Delta$ T


3892 BTU/hr @ +20 °F ΔT

RATING (DIN 3168)

815 Watts L35 L35


410 Watts L35 L50

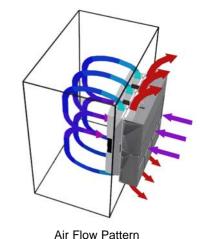

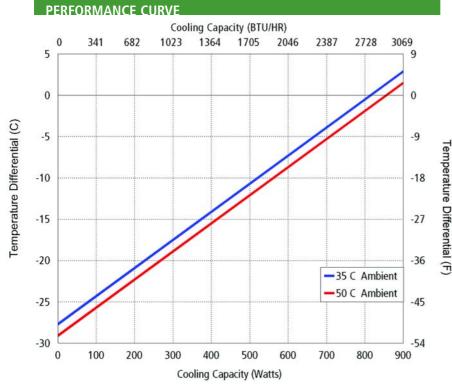


Equation of line: $y=\Delta T(^{\circ}C)$ x=Capacity (Watts)			
Ambient Temp	35°C	50°C	
Enclosure Air	y=.034x-27.7	y=.034x-29.1	
Cold Sink	y=.026x-27.7	y=.026x-29.1	


### DIMENSIONS

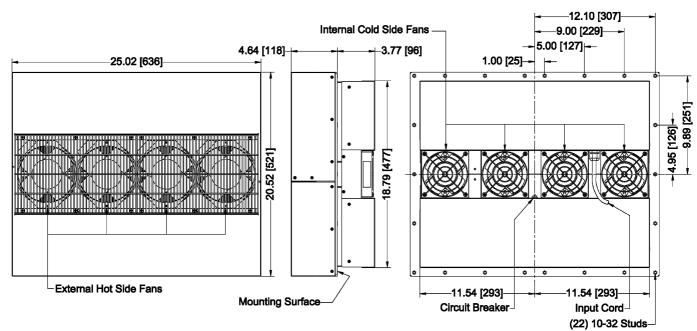


Dimensions do not include hardware Mounting hardware and gasket included but not shown Dimensions: Inches [Millimeters]

Mounting Cutout 23.20X18.90 [589X480]

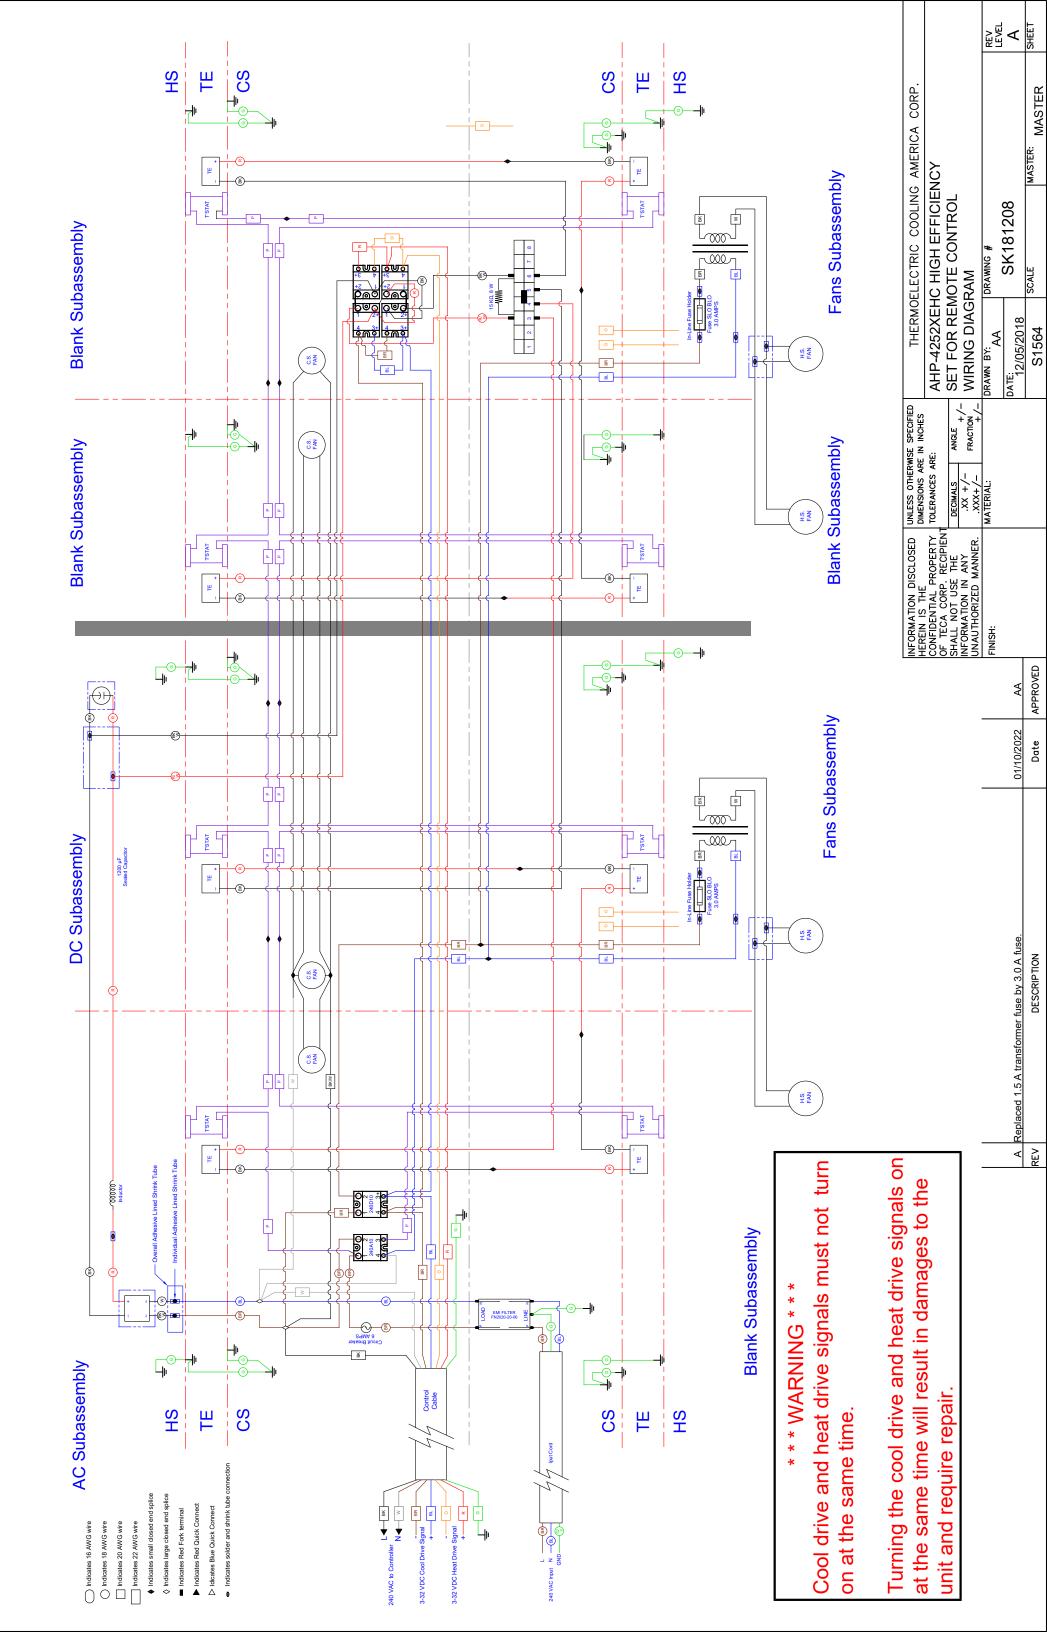

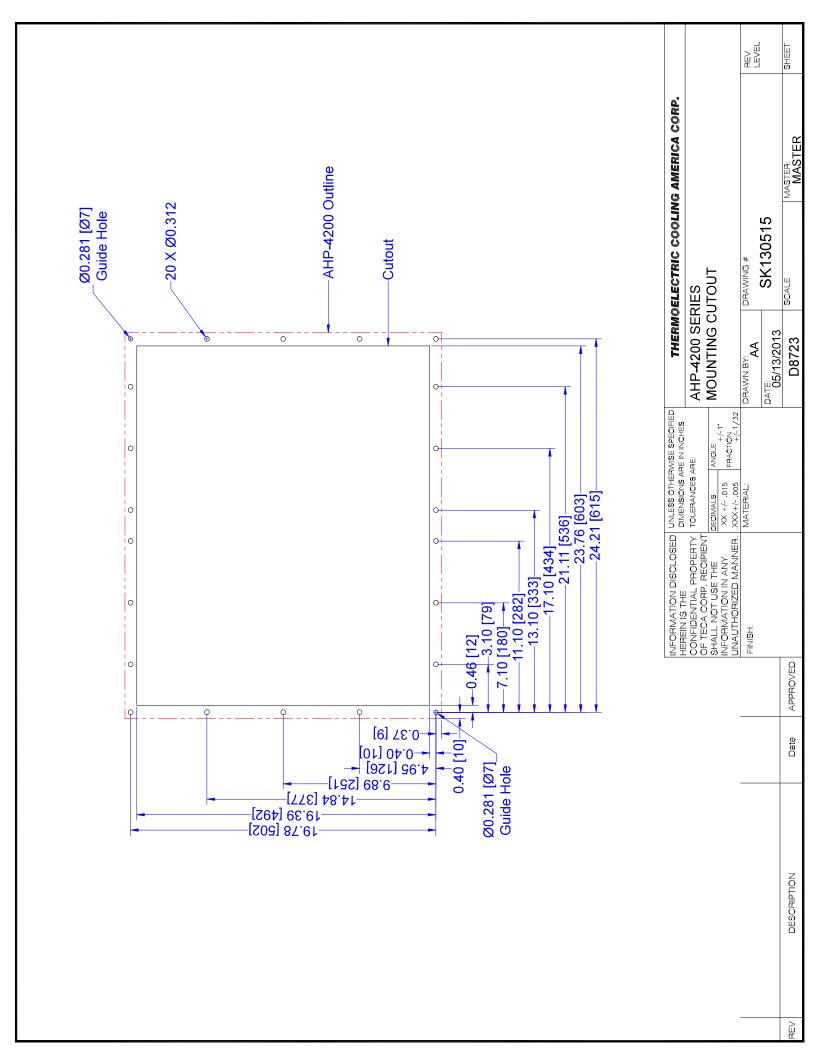

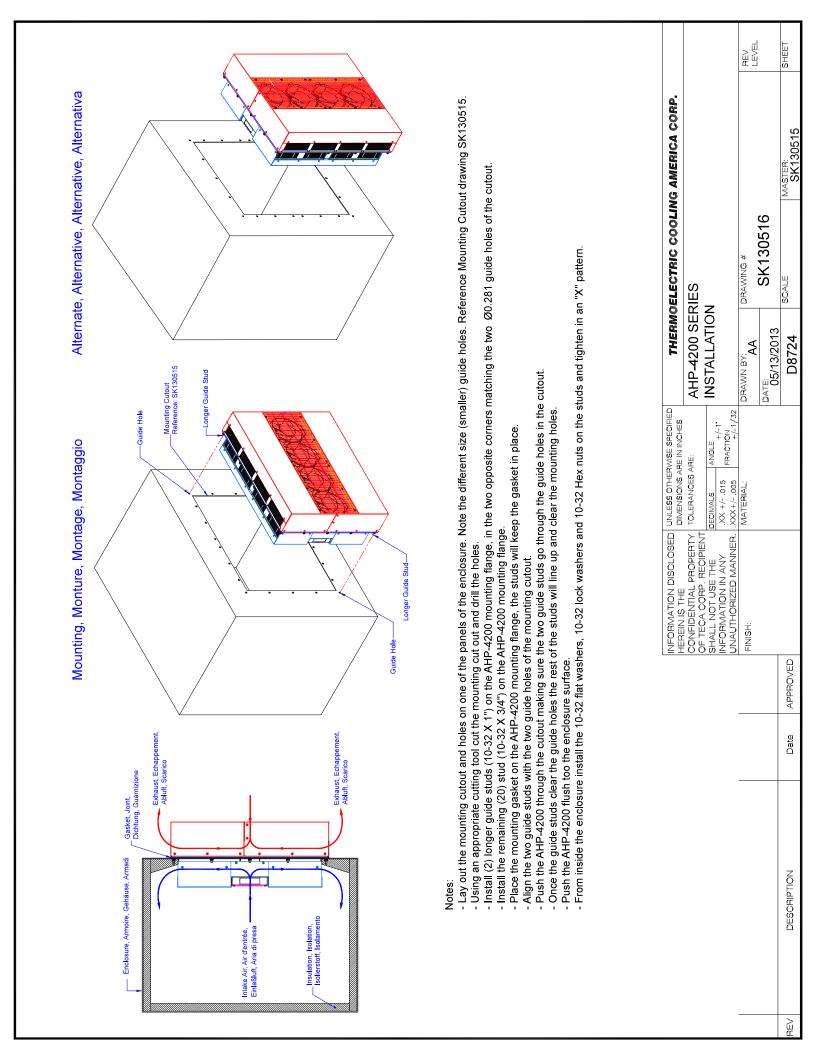

### LIMITED WARRANTY

In the event a defect in material or workmanship is discovered in any of TECA's products within one year after the date they are delivered to Buyer, and if: (a) TECA is notified of the defect in writing by certified mail within 14 days of the date of discovery; (b) TECA may then either, at its sole discretion, inspect the product at Buyer's location, or require that the product be made available at Buyer's expense at TECA's premises for TECA's inspection within 14 days of the date of notification; and (c) the products are defective and the defects result from faulty materials and/or workmanship and not in any way from accident, misuse, misapplication, mishandling, modification, or alteration by the Buyer or the shipper, then TECA shall, at its sole option, repair or exchange defective products free of charge to Buyer, or credit to buyer the price of the defective products. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, ARE EXCLUDED. INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL TECA BE LIABLE FOR ANY CLAIM BASED UPON BREACH OF EXPRESS OR IMPLIED WARRANTY OR ANY OTHER DAMAGES WHETHER SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL, LOST PROFITS, BUSINESS INTERRUPTION. OR LOSS OF BUSINESS OR CUSTOMER RELATIONSHIPS.

### RETURNED GOODS, RESTOCKING CHARGES

In order to return merchandise for any reason (repair, replacement, or credit) a return authorization number must be issued by TECA. New merchandise may not be returned for credit beyond 60 days from shipment. Charges for incidental or other damages may also be made. All returned goods must be sent freight prepaid. A restocking charge of 15% will apply. On special equipment and custom modified equipment orders, additional incremental cancellation charges may be made.